

QUICK FLUSH INSTRUCTION

VALVES: **A** SEA WATER INLET
B TO ENGINE WATER PUMP
C HOSE/ STRAINER ATTACHMENT

FUNCTION	A	B	C	ENGINE
Normal operation	open	open	closed	running
Flush Engine	closed	open	open	running
Back Flush Drive	open	closed	open	off
Pump Out Bilge*	closed	open	open	running
Winterize*	closed	open	open	running

*Use strainer attachment. To winterize put strainer in antifreeze and run until mixture is discharged through stern drive.

Marine Engine Flushing Kit

An Overall View of the Engine Cooling System with Installed Quick Flush Valve

